



Sl No.	Description
1a,1b.	Suction Strainer
2a,2b.	Hydraulic Pump
3a,3b.	Flexible Coupling
4a,4b.	Electric Motor
5	Oil Level Sensor
6	Oil Temp. Sensor
7	Filler Breather
8	Dip Stick
9	Pressure Gauge
10	Pr. Relief Valve
11	Pre. Switch Low Pre. Alarm
12	Sol. Ope. Directional Valve
13	Emergency Manual Pump
14	Pilot Operated Double Check Valve
15a,15b	Hyd. Actuator - JumboZ 500
16a,16b	Tiller Arm
17	Limit Switch
18	Mechanical Stopper ( Yard Supply )
19	Connection Rod ( Yard Supply )
20a,20b	Joy Stick
21a,21b	Ele. Line to Sol. Ope. Valve
22	Reservoir
23	Steering Gear Control Panel
24	Unloading Valve
25a,25b	Isolation Valve
25c,25d	Isolation Valve
26a,26b	By-Pass Valve
27a,27b	Rudder Angle Indicator
28	Rudder Angle Sensor
29a,29b	Non-Return Valve